

## Performance Tests

- d) Press  
    [Freq]  
    Use the knob to set the internal oscillator frequency to the value in the table.
  - e) Wait for the R reading to stabilize. Record the value of R.
  - f) Repeat steps 4d and 4e for all of the frequencies listed.
- 5) This completes the sine output amplitude accuracy and frequency response test. Enter the results of this test in the test record at the end of this section.