

## INPUT and FILTER COMMANDS

**ISRC (?) {i}**

The ISRC command sets or queries the input configuration. The parameter i selects A (i=0), A-B (i=1), I (1 MΩ) (i=2) or I (100 MΩ) (i=3).

Changing the current gain does not change the instrument sensitivity. Sensitivities above 10 nA require a current gain of 1 MΩ. Sensitivities between 20 nA and 1 μA automatically select the 1 MΩ current gain. At sensitivities below 20 nA, changing the sensitivity does not change the current gain.

**IGND (?) {i}**

The IGND command sets or queries the input shield grounding. The parameter i selects Float (i=0) or Ground (i=1).

**ICPL (?) {i}**

The ICPL command sets or queries the input coupling. The parameter i selects AC (i=0) or DC (i=1).

**ILIN (?) {i}**

The ILIN command sets or queries the input line notch filter status. The parameter i selects Out or no filters (i=0), Line notch in (i=1), 2xLine notch in (i=2) or Both notch filters in (i=3).