


Transient-Response (or Time-Domain) Specs

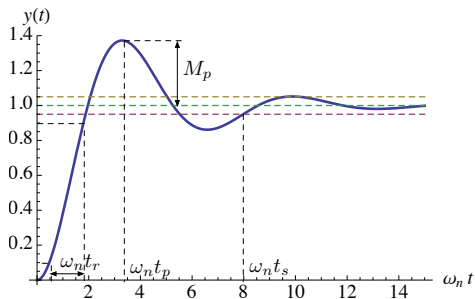

Do we want these quantities to be large or small?

- ▶ t_r small
- ▶ M_p small
- ▶ t_p small
- ▶ t_s small

Trade-offs among specs: decrease $t_r \rightarrow$ increase M_p , etc.